



UIMAGE



## STRAIGHTEN OUT THE FEATHERS

Every Eos lampshade is unique in the way the feathers are displayed and small gaps may occur on the lampshade when you unpack your new product.

To even out the feathers and close the gaps, bend them with your fingers by squeezing and bending the feathers between your thumb and index finger until the gaps are closed and the feathers have the look you want.



## CLEANING

Keep the lamp clean using a hair dryer on the coolest setting, 25 cm (10") from the lamp and blow the loose dust from the feathers. Use a damp cloth for dust that is difficult to remove.